


Hydraulic Wedgie and Spread Cylinders


▼ Shown clockwise from top: **WR15, WR5, A92**




- **WR5:** For use in very confined work areas
- **WR15:** For long stroke spreading applications
- **Single-acting, spring-return**
- **A92:** Spreader attachment; threads on 10-ton RC-Trio Series cylinders * (except RC101).

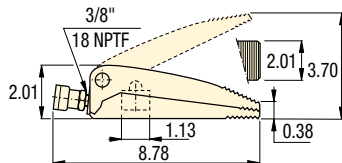

WR5

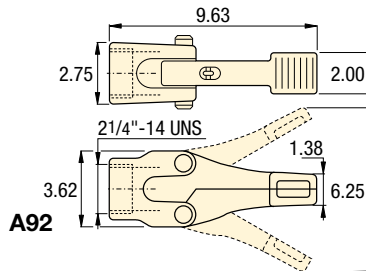

A92

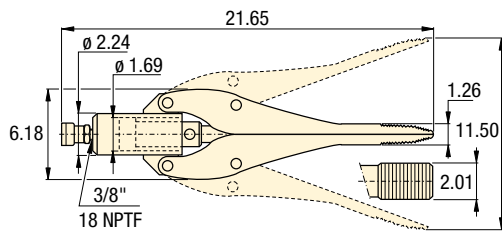

WR15

Cylinder Capacity	Tip Clearance	Model Number	Maximum Spread	Cylinder Effective Area	Oil Capacity	
(tons)	(in)		(in)	(in ²)	(in ³)	(lbs)
1.0	0.50	WR5	3.70	1.00	0.61	5.0
0.75	1.26	WR15	11.50	2.25	3.91	25.0
1.0	1.38	A92 *	6.25	—	—	8.0

* Maximum system pressure must be limited to half the rated pressure (5,000 psi).

A WR Series



Capacity:
0.75 - 1.0 tons

Tip Clearance:
0.50 - 1.38 inches

Maximum Spread:
3.70 - 11.50 inches

Maximum Operating Pressure:
10,000 psi



RC-Trio Series Cylinders

10-ton RC-Trio Series cylinders (except RC101) fit into **A92** Spreader Attachment.

Page: 12



Portable Toolbox

Tool box with **P392** hand pump, gauge adaptor assembly, hose and **WR5**.

Page: 11



Best Match Hand Pump

To power your **WR5** and **WR15** the **P392** hand pump is an ideal choice. Use Enerpac **H700-Series** hoses (page 136) for hydraulic connection.

Page: 78

▼ A **WR5** wedgie cylinder is used to loosen a bridge bearing.

