



Power Amplifier with PID for EDC-Controlled Pumps

EEA-EDC-436-D*-32 Series

General Description

The EEA-EDC-436-D*-32 Eurocards are power amplifiers with integrated PID modules. Each of these cards replaces two conventional electronic cards.

Features and Benefits

- Includes all features of "A" amplifiers (except gain)
- User configurable PID feed-forward closed-loop operation
- Command input ramps
- Analog feedback sensor interface
- Automatic switch-over p/Q function
- Built-in test feature
- The design reduces the amount of external wiring, saves space in the rack enclosure and requires only one 24V supply
- The general purpose, integrated module can be configured using DIL switches (D1–D9) and potentiometers for the following applications:
 - Closed-loop pressure control using either proportional pressure valves or servo-performance proportional valves
 - Closed-loop velocity control
 - p/Q control with internal or external switch-over from Q to p
- The DIL switch and potentiometer settings can easily be reconfigured on different cards

Front Panel

LEDs

1. 24V power supply input, green
2. 15V control supply output, green
3. Drive (solenoid) enabled, yellow
4. Overload, red
5. Yoke sensor failure, red
6. Drive level to solenoid, yellow

Potentiometers

7. Offset

LED

8. Ramp enabled (yellow)

Potentiometers

9. Command ramp up
10. Command ramp down

Monitor Points ■

11. MP1: conditioned command signal
12. Common ground (0V)
13. MP2: Yoke position

14. Mode switch
 - TEST **PUMP** setting
 - AUTO function setting
 - TEST LOOP setting

15. Test potentiometer

LEDs

16. PID-controller enabled, yellow
17. Integrator enabled, yellow
18. Feedback = command signal, green
19. Sensor failure, red

Potentiometers

20. Feed-forward signal scaling
21. P-gain
22. I-gain
23. D-gain

Monitor Points ■

24. MP3: Command signal
25. MP5: PID-controller output
26. MP6: Integrator output
27. MP4: Feedback signal

■ Ø 2,0 (0.0787 dia.) sockets



This product has been designed and tested to meet specific standards outlined in the European Electromagnetic Compatibility Directive (EMC) 89/336/EEC, amended by 91/263/EEC, 92/31/EEC and 93/68/EEC, article 5. For instructions on installation requirements to achieve effective protection levels, see this leaflet and the Installation Wiring Practices for Vickers Electronic Products leaflet 2468. Wiring practices relevant to this Directive are indicated by Electromagnetic Compatibility (EMC).

Model Codes

Amplifier model	For	Assy. Nr
EEA-EDC-436-D1 —32	PVH 57 & 74	02-326 129
EEA-EDC-436-D2 —32	PVH 98	02-326 130
EEA-EDC-436-D3 —32	PVH 131	02-326 131

Operating Data

Power (input) supply:	bzd 32 bzd 30	20 to 40 V DC (incl. pk-to-pk ripple $\pm 10\%$ max.) Power ground
Control (output) supplies:	z22	+15V
Reference voltages	z2 b2	+10V x 5 mA -10V x 5 mA
Analog inputs:		
Command inputs		
Direct voltage inputs	b6,b8,b10,z8	
Inverting voltage input	z10	
Voltage range		$\pm 10V$
Input impedance (voltage)		47 k Ω
Current input	z6	
Current range		± 20 mA
Input impedance (current)		100 Ω
Feed-forward Input	d8	
Input impedance		6 k Ω
Voltage range		$\pm 10V$
Input to ramp generator	d28	
Input impedance		10 k Ω
Voltage range		$\pm 10V$
Inputs from sensors		
Voltage input	d2	
Input impedance		1 M Ω
Voltage range		0 to 10V or $\pm 10V$ ■
Current input		
Input impedance		100 Ω
Current range (see "DIL Switches " five pages on)		4–20 mA or 0 –20 mA
Monitoring of sensor failure for sensors with a current output only		
■ The demand signal should have the same voltage range as the sensor feedback, i.e. 0 to 10V, or $\pm 10V$		

Operating Data

Digital inputs: Drive enable (power available to solenoid) z24 Ramps enable b24 Integrator enable d14 PID controller enable d12 Enabled Disabled Load current	 Warning : in a power-up sequence, the integrator should not be enabled until all hydraulic, electric and control power and signals are applied and stable. Abrupt or unpredictable motion may occur if integrator is enabled during this transition time
Digital outputs: Sensor failure d18 Sensor failure Sensor OK Load current (withstands a continuous short-circuit condition) This output may be used only in conjunction with sensors providing a current output (4–20 mA) Feedback = command signal d10 Feedback matches demand Feedback does not match demand Load current (withstands a continuous short-circuit condition) The load at pin d18 and at pin d10 has to be connected to ground	Supply Voltage – 2V < 3V ≤ 100 mA Supply Voltage – 2V < 3V ≤ 100 mA
Analog outputs: PID controller output d4 Error signal d22 Feedback signal d24 Load impedance Voltage range Output from ramp generator d26 Load resistance Voltage range	≥ 10 k W; short-circuit proof ± 10V ≥ 5 k W; short-circuit proof ± 10V
Alarm output (drive output status) z12 Set alarm Signal Reset after failure	Enable amplifier (on pin z24) when switching power on HIGH when alarm is activated Output = Supply minus 2V I = 50 mA max. LOW when solenoid overload has occurred. (Maintained until reset.) Output = 0 to ± 2 volts Output resistance = 50 ohms Disable and re-enable on pin z24
Ramp active indicator: b12 Drive ramping up Drive ramping down Drive not ramping Output resistance	Output >10V Output <–10V Output 0V (± 2V ripple) 10 k Ω
Drive signal zero indicator: b20 Drive signal at null (within deadband limits) Drive active Output resistance	Output = Supply minus 1,5V I = 50 mA max. Output = 0 ± 2V 50 Ω

Operating Data

Potentiometers:			
Feed-forward		V = 20% to 100%	(20% is potentiometer fully CCW)
P-gain (depends on DIL switch D2)		P = 0,1 to 50 V/V	(0,1 V/V is potentiometer fully CCW)
I-gain range		K _i = 0,5 to 100V/s/V	(0,5 V/s/V is potentiometer fully CCW)
D-gain range		K _d = 0 to 0,5 V/V/s	(0 V/V/s is potentiometer fully CCW)
Sensor signal gain range ■		90% to 120%	(90% is potentiometer fully CCW)
Sensor signal offset range ■		± 10%	(– 10% is potentiometer fully CCW)
Monitor points:			
Conditioned command signal	MP1	0V to 10V equals 0% to 100% yoke command	
Yoke position	MP 2	0V to 10V equals 0% to 100% yoke angle	
Command signal	MP 3	–10V to 10V equals –10% to 100% closed loop control command	
Feedback signal	MP 4	–10V to 10V equals –10% to 100% sensor signal	
PID controller output	MP 5	0V to 10V equals 0% to 100% yoke command	
Integrator output (100%, independent of D3, D4, D5)	MP6	0V to 10V equals 0% to 100% integrator term	
Voltage range		± 10%	
Monitor point impedance		10 kΩ	
Ambient conditions:			
Storage temperature range		–25° to +85 °C (–13 ° to + 185 °F)	
Operating temperature range		0° to 50 °C (32 ° to + 122 °F)	
Mass		0,4 kg (0.88 lb) approx.	
Installation and start-up guidelines (supplied with product)		9166	
Installation wiring requirements for Vickers electronic products		2468	
Application notes (available on request)		9060	
Supporting products:		See catalogs:	
Power unit options		2419	
Electronic accessories		2460	
Portable test equipment		2462 and 2315	
■ Located on PID module		1.6A	




Warning: Electromagnetic Compatibility (EMC)

It is necessary to ensure that the valve is wired up in accordance with the connection arrangements shown in this leaflet. For effective protection, the user's electrical cabinet, the valve subplate or manifold and the cable screens should be connected to efficient earth (ground) points. The metal 7-pin connector part no. 934939 should be used for the integral amplifier.


In all cases, both valve and cable should be kept as far away as possible from any source of electromagnetic radiation such as cables carrying heavy current, relays and certain kinds of portable radio transmitters, etc. Difficult environments could mean that extra screening may be necessary to avoid the interference.

Circuit and Connections

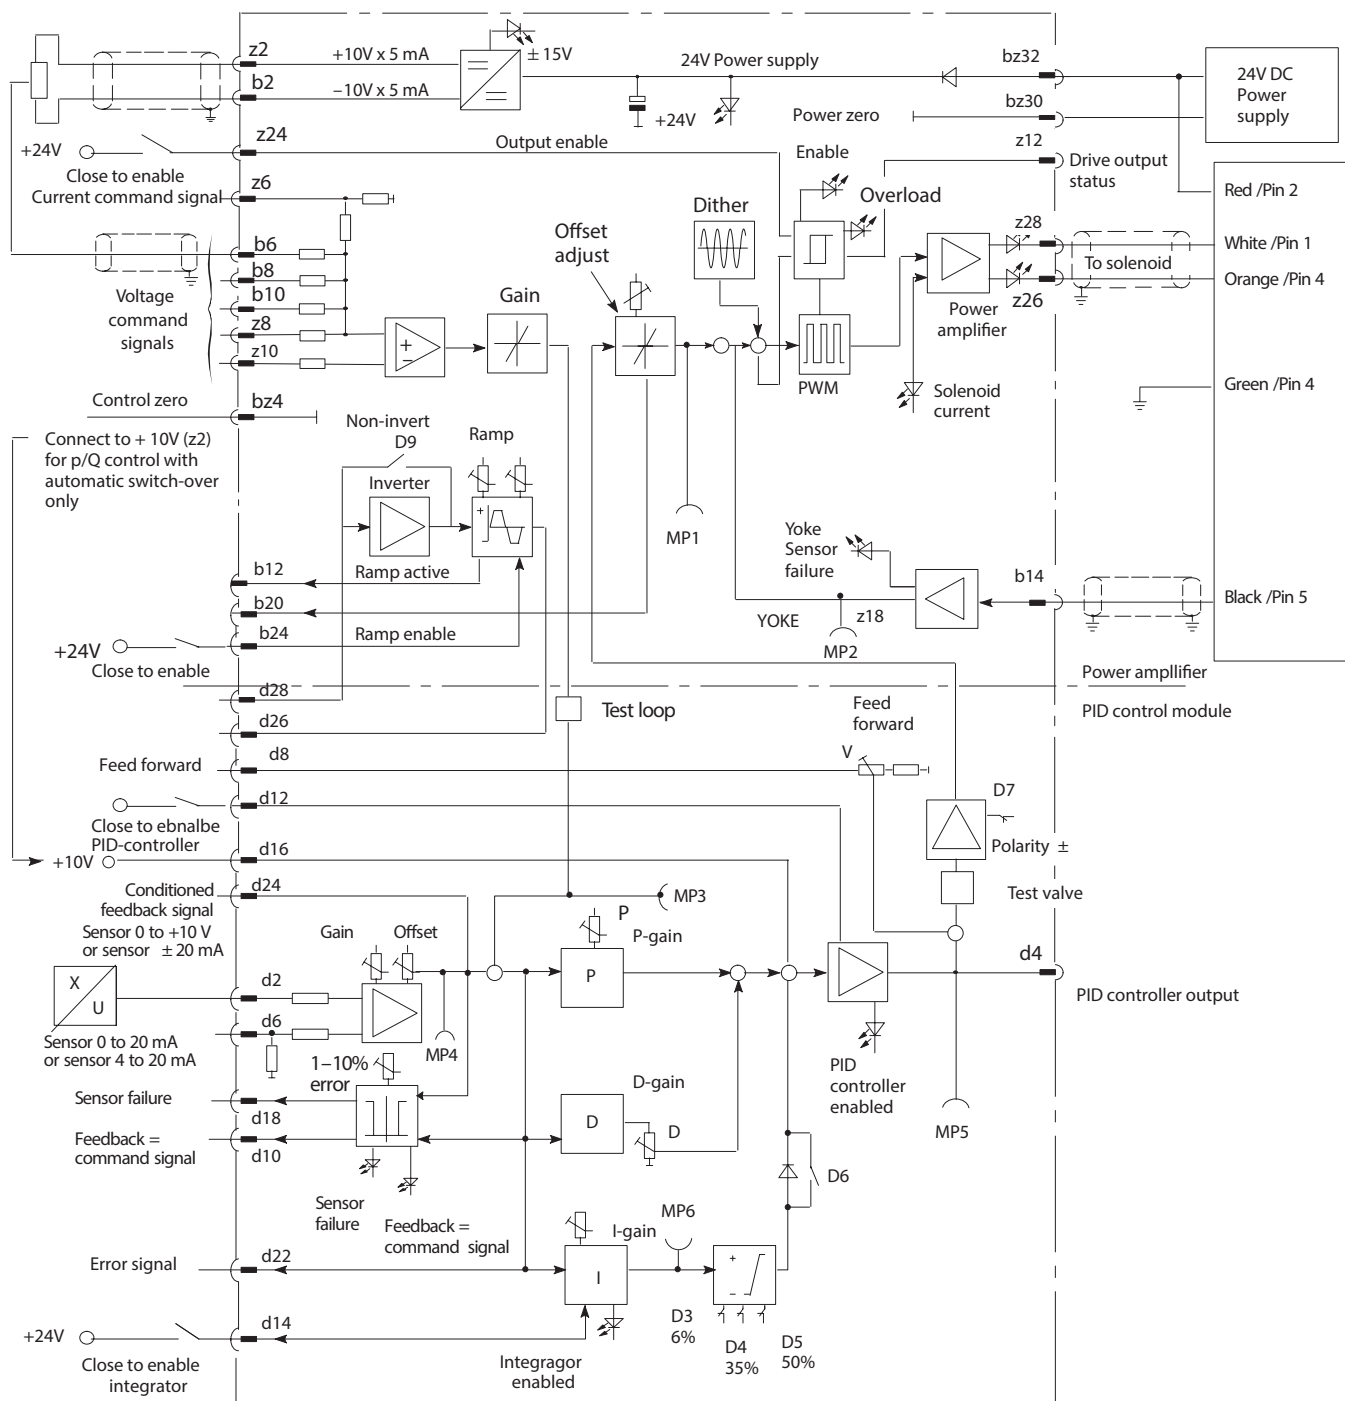


Customer's protective ground protection

Circuit & Connections for P/Q Control with Pump Wiring

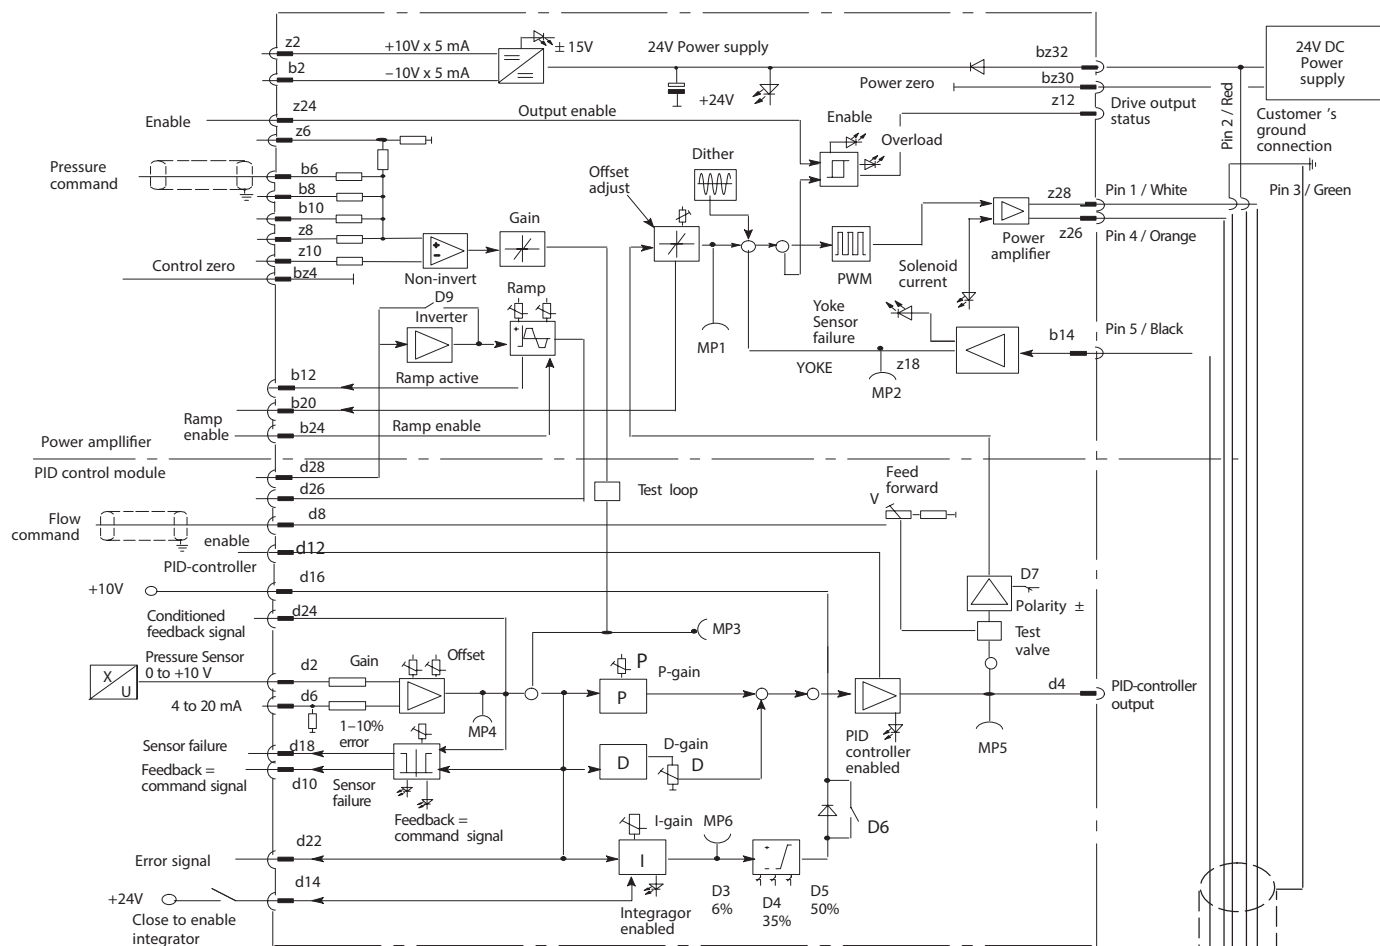


Pump Assembly

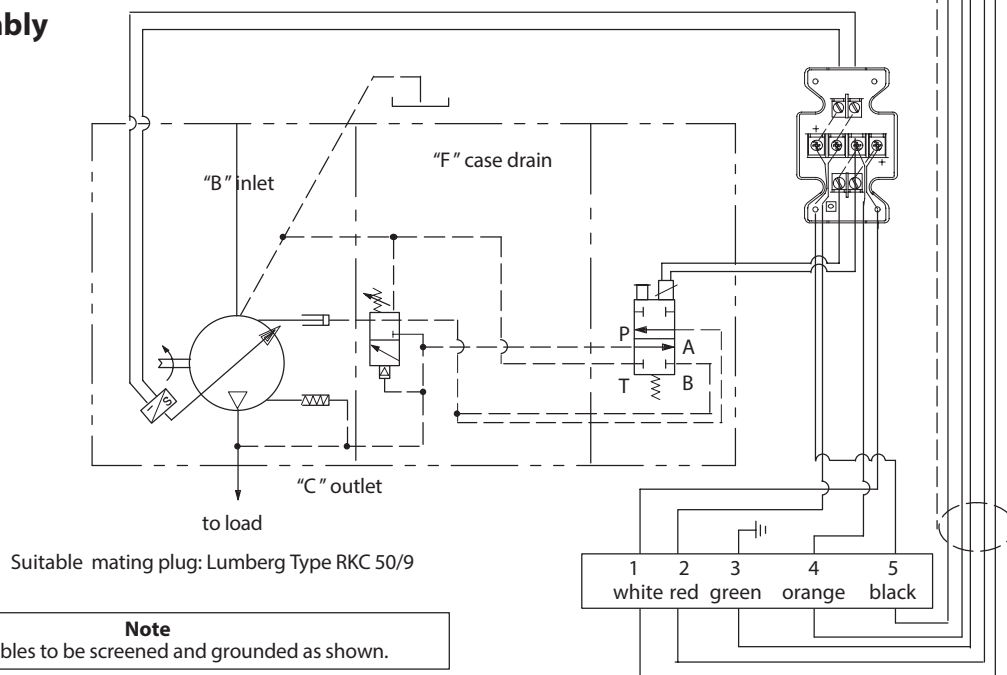

Installation dimensions

Plug-in unit of 3U height, to IEC 297

mm (inch)

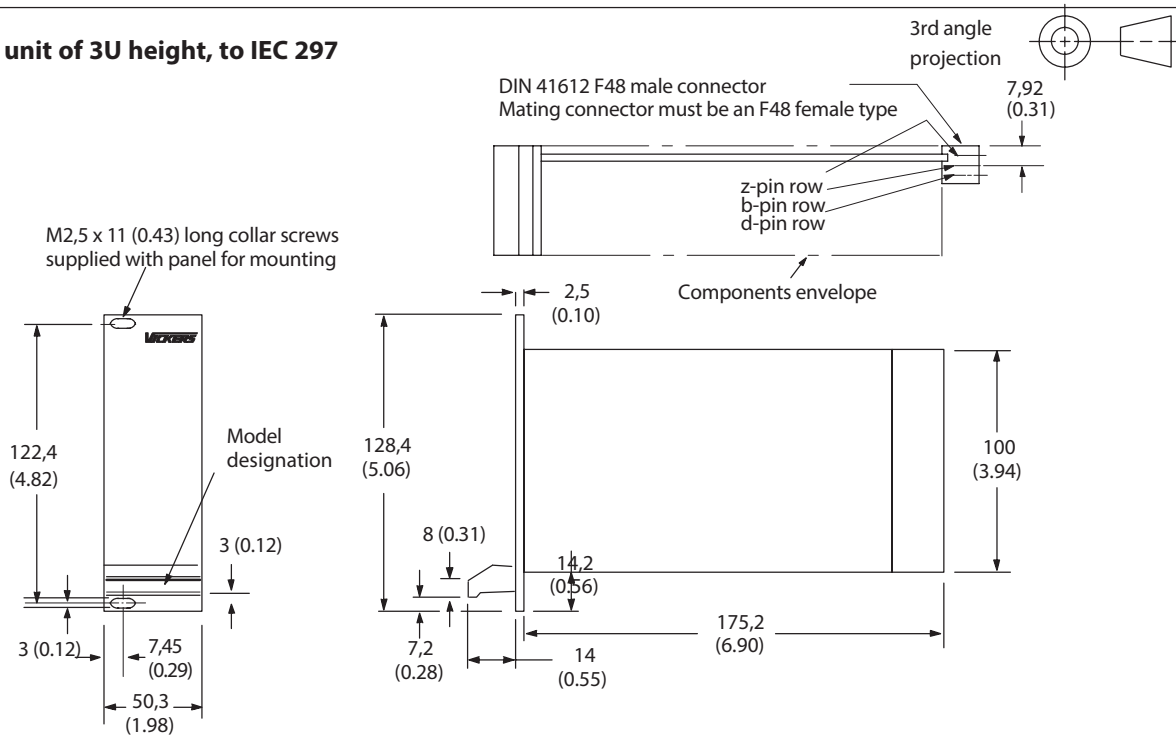

Application notes

Operation of the Integrated Test Mode


The basic operation of the hydraulic actuator can be tested by using the 3-position mode switch mounted on the front panel. To select different modes the toggle switch must be lifted slightly before turning it to a new position.

Caution:

Before setting the mode switch to either "Test pump" or "Test loop" make sure the test potentiometer is set to "0". Otherwise sudden movements of the actuator may occur.

The mode switch has 3 positions:

AUTO
The controller operates in closed-loop mode, using the external command signal. The test potentiometer is disconnected.

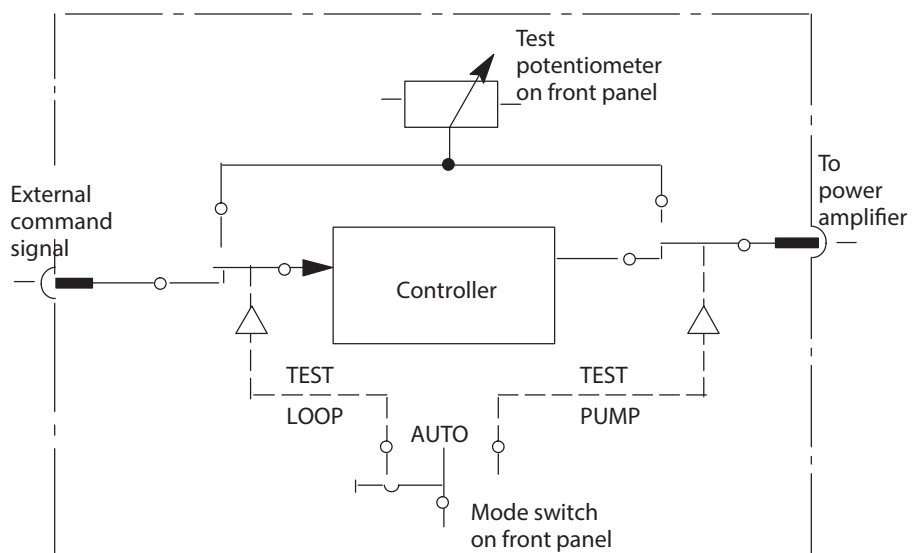

TEST PUMP

An open-loop command signal for the valve comes directly from the potentiometer. The external input signal is disconnected. The hydraulic part of the system may be tested in this configuration.

TEST LOOP

The closed-loop command signal for the PID-controller comes directly from the potentiometer. The external signal input is disconnected. This configuration allows for verification of the valve polarity and the control parameters.

Application notes

DIL Switches

The controller is configured for the application, using DIL switches, located on the board.



Factory setting

The DIL switch operates as follows:

Switch	ON	OFF
D:1	For sensors with 4 to 20 mA output	For sensors with 20 mA outputs
D:2	P –gain 2 to 50	P –gain 0,1 to 2
D:6	One sided limitation of the integrator output. (only useful for proportional pressure and proportional throttle valves).	No limitations of integrator output
D:7	Inverts the controller output signal	Non-inverted signal
D:8	For sensors with 4 to 20 mA output	For sensors with 20 mA outputs
D:9	Inverts the ramp signal	–
D:10	Not used	–


For p/Q control with automatic switch-over, connect d16 to z2 (+10V). The flow command signal (Q) is applied to the feed-forward input, d8, and the desired pressure setpoint voltage applied to a command signal input (b6/8/10 or z6/8/10). The pressure feedback sensor is connected to the sensor input d2, or d6 as required.

The pressure control loop will override the flow command to limit the pressure to the level determined by the pressure setpoint voltage. Adjust P and D gains for best performance.

The switches D3, D4 and D5 belong together. They limit the I output volts between 100% (10V) and 5% (0,5V) as follows:

D3	D4	D5	I-limit
ON	ON	ON	100%
ON	ON	OFF	50%
ON	OFF	ON	35%
ON	OFF	OFF	25%
OFF	ON	ON	5,9%
OFF	ON	OFF	5,8%
OFF	OFF	ON	5,3%
OFF	OFF	OFF	5,0%

Location of user features on PID module

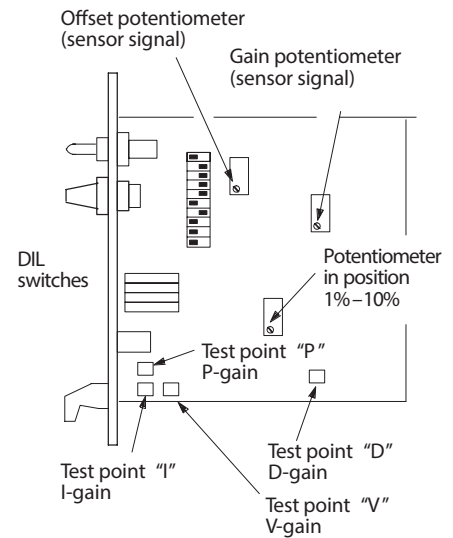

Reconfiguration of Controller Parameters

Once the controller parameters have been optimized and set, they can be measured by means of an ohmmeter. This allows easy reconfiguration of the controller on different cards for use as spare parts or on standard machine series.

Four test points are located on the PID-module for this purpose, see diagram for locations. The resistance between the appropriate test point and ground (at the front panel monitor point) determines the controller parameters:

PID = P-gain
I = I-gain
D = D-gain
V = Feed-forward gain

Products we offer:

- Cartridge valves
- DCV directional control valves
- Electric converters
- Electric machines
- Electric motors
- Gear motors
- Gear pumps
- Hydraulic integrated circuits (HICs)
- Hydrostatic motors
- Hydrostatic pumps
- Orbital motors
- PLUS+1® controllers
- PLUS+1® displays
- PLUS+1® joysticks and pedals
- PLUS+1® operator interfaces
- PLUS+1® sensors
- PLUS+1® software
- PLUS+1® software services, support and training
- Position controls and sensors
- PVG proportional valves
- Steering components and systems
- Telematics

Hydro-Gear

www.hydro-gear.com

Daikin-Sauer-Danfoss

www.daikin-sauer-danfoss.com

Danfoss Power Solutions is a global manufacturer and supplier of high-quality hydraulic and electric components. We specialize in providing state-of-the-art technology and solutions that excel in the harsh operating conditions of the mobile off-highway market as well as the marine sector. Building on our extensive applications expertise, we work closely with you to ensure exceptional performance for a broad range of applications. We help you and other customers around the world speed up system development, reduce costs and bring vehicles and vessels to market faster.

Danfoss Power Solutions – your strongest partner in mobile hydraulics and mobile electrification.

Go to www.danfoss.com for further product information.

We offer you expert worldwide support for ensuring the best possible solutions for outstanding performance. And with an extensive network of Global Service Partners, we also provide you with comprehensive global service for all of our components.

Local address:

**Danfoss
Power Solutions (US) Company**
2800 East 13th Street
Ames, IA 50010, USA
Phone: +1 515 239 6000

**Danfoss
Power Solutions GmbH & Co. OHG**
Krokamp 35
D-24539 Neumünster, Germany
Phone: +49 4321 871 0

**Danfoss
Power Solutions ApS**
Nordborgvej 81
DK-6430 Nordborg, Denmark
Phone: +45 7488 2222

**Danfoss
Power Solutions Trading
(Shanghai) Co., Ltd.**
Building #22, No. 1000 Jin Hai Rd
Jin Qiao, Pudong New District
Shanghai, China 201206
Phone: +86 21 2080 6201